

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Maintenance data (U.S.A. only)	After the maintenance is performed	P. 380
Tire pressure warning system	<ul style="list-style-type: none">• When rotating the tires with differing front and rear tire inflation pressures.• When changing the tire inflation pressure by changing traveling speed.• When changing the tire size.	P. 407

